


How To Cleanly Use And Disinfect Suprema Products

Product disinfecting recommendations:



- Use rubbing alcohol (containing 70% Isopropyl alcohol) and a clean, non-abrasive cloth like lens wipe.

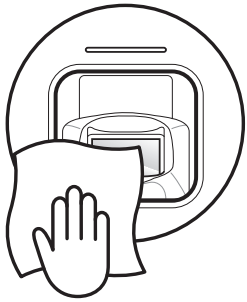

- Moisten the cloth or the wipe with a proper amount of rubbing alcohol and gently clean fingerprint sensor surface.

Cautions:



- Be sure to read and use the cautions for use of alcohol purchased.
- Be careful not to get alcohol into the product when cleaning the surface of the product. Disinfecting products should only be applied to exposed surfaces.
- Contact Suprema for approval to use specific cleaning products.
- Do not apply liquid directly to the surface of the product.
- Do not use any form of abrasive cleaner to painted or plastic surfaces.